


HT3012 / HT3023 (SD)


- 1) Ontvet de aangegeven punten !
- 2) Breng de meegeleverde Loctite® 648 aan op de aangegeven punten.

- 1) Degrease the marked area's !
- 2) Put on the supplied Loctite® 648 on the marked area's.

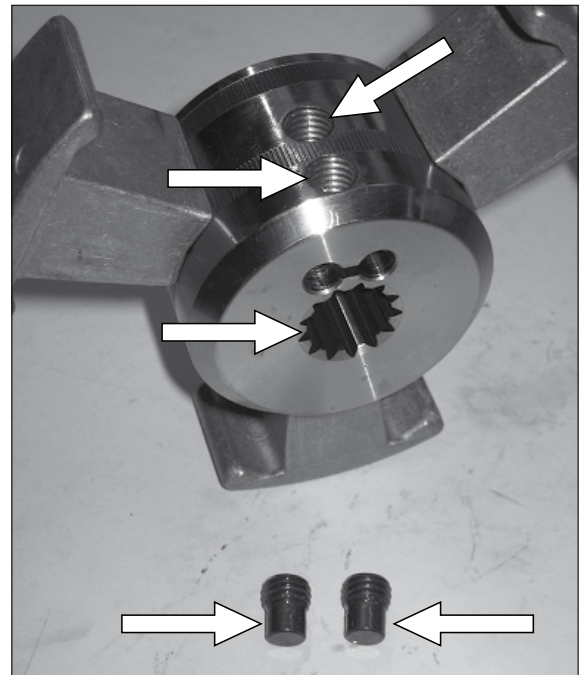

- Zet de inbusbouten goed vast, nadat er Loctite® 648 is aangebracht !
- Tighten the bolts well after the Loctite® 648 has been put on !

Aanhaalmoment Tightening torque	Koppeling / Coupling	
	HT3012	HT3023 (SD)
Borgboutjes Hub clamping screws	50 Nm	70 Nm
Axiale en radiale bouten Fastening screws Axial and Radial	90 Nm	140 Nm

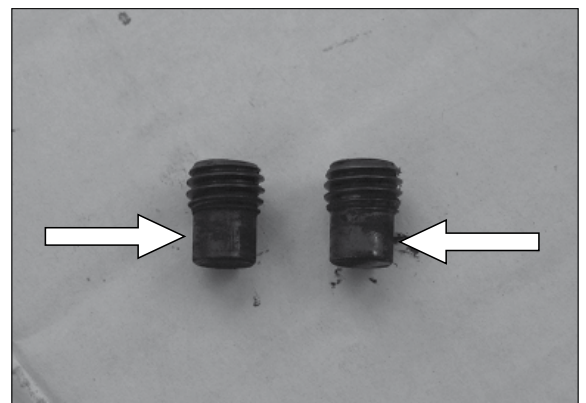

- Doe Loctite® op de spline !
- Put Loctite® on the spline !

